


Trace this pattern on the rough side of the leather

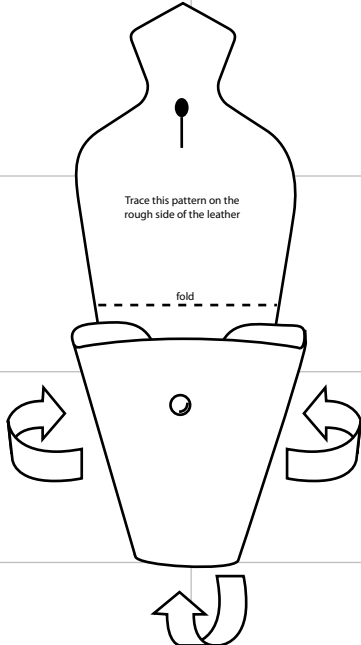

Trace this pattern on the rough side of the leather

fold

- Attach "Sam Browne" Button
- Flip front of pouch upward
- Flip sides around so that corresponding holes match up.
- Make sure sides tuck to the INSIDE of the pouch.
- Rivet Pouch to Bandolier. bottom holes first (B,D), then rivet the top holes (A,C).

B

D

fold

fold

fold

fold

A

C

B

D

flaps line up here

flaps line up here

